

2014 Debit Wallets - Velcro
 by Sherry Titzer
<http://www.atimetostitch.com>

List of supplies & cutting instructions provided with orders. Project fits 5x7 or larger hoops to make wallet in the hoop except for final top stitching! Just follow the steps in the order listed below!

STEP 1 – ADDING VELCRO DEBIT CARD ENSEMBLE



1. On the sleeve pieces, fuse 4" strip of Heat 'n Bond tape even with edges on both 4 1/2" sides on all four sleeve pieces.



Fold fabric at inside edge of tape on one edge only, iron to crease. Remove paper & iron again to fuse on all 4 sleeves.


2. On 2 sleeve pieces add 1 3/4" x 4 1/2" strip of fusible interfacing between strips of fusible tape keeping bottom even with top edge of fusible tape (that edge is the bottom).



3. On top edge of sleeves, fold at inside edge of tape & iron to crease. Remove paper backing & iron again to fuse fold on all sleeves. (interfacing on 2 pieces not shown in picture)



4. Hoop stabilizer, stitch placement line on stabilizer only. Spray area with temporary adhesive spray.

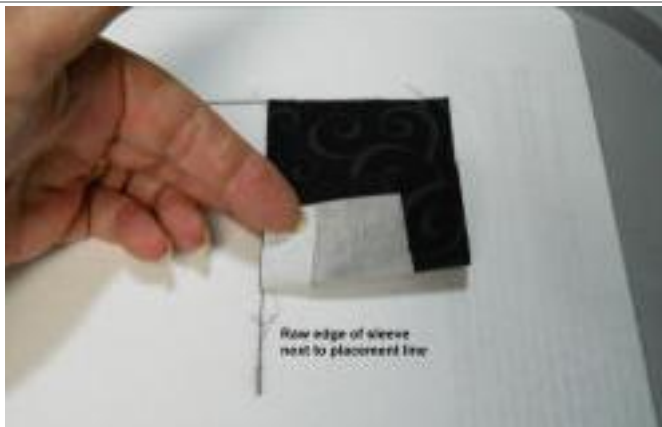

Raw edge of sleeve next to placement line

5. Place raw edge with fusible tape at vertical placement line keeping top even with top placement line. Place 2nd interfaced sleeve on the other side in the same manner.



6. Next step stitches rectangle outlines. Small arrows are stitched inside to help with placement on ensemble later.



7. Rub glue stick on wrong side of velcro. Center velcro inside each rectangle. (you may need to iron velcro on wrong side to flatten)



8. Next step stitches velcro to sleeves with narrow zig-zag stitch. Tear away or cut the sleeves from the stabilizer.



9. Mark faint lines across base FRONT fabric 2 3/4" in from both ends. Remove paper backing on 2 other sleeves & place folded edge at the 2 3/4" marks. Iron to fuse bottom of sleeves to base fabric.



10. Remove paper backing on the last 2 sleeves (with velcro) and place bottom edge even with the ends of base fabric, iron to fuse. (Arrows on back facing the right side).



11. On wrong side of Base BACK fabric, add fusible tape centered at one edge. Place other edge of fabric wrong side up over sleeve ensemble on right side & stitch with a 3/8" seam.




12. Flip fabric around flat seam to create bound edge. Remove paper & iron to fuse fabric on back. Top stitch bound edge & other side to secure sleeves. Velcro is off center on sleeve ensemble but will be centered on finished wallet.




Flip sleeve ensemble over and mark center on the unfinished edge (3 3/4" is center)

STEP 2 - WALLET

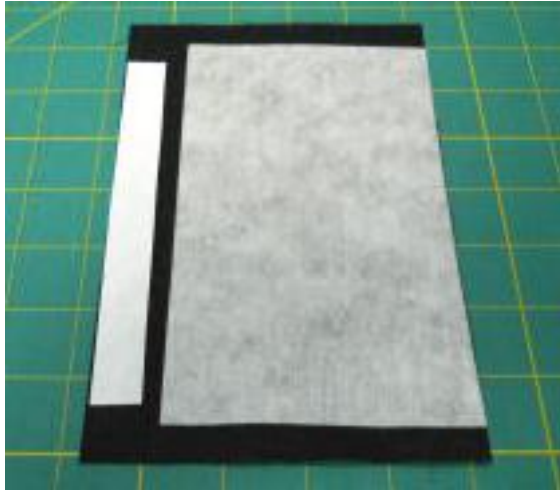


13. LINING – On wrong side of lining add fusible interfacing centered and even with 1 edge. Add fusible tape to other edge centered.

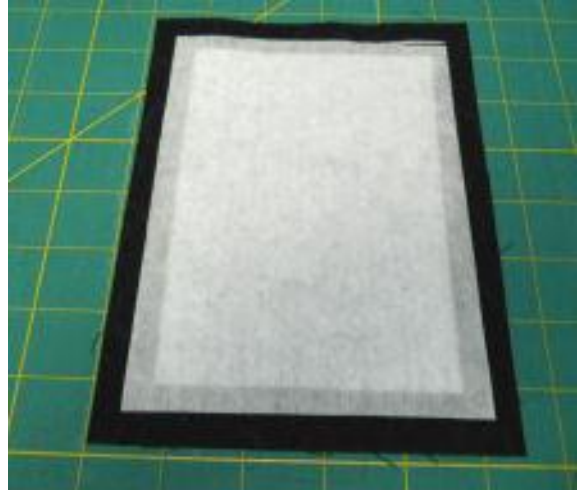

14. CASE FABRIC - Center fusible fleece on wrong side of fabric. Next, center larger piece of fusible interfacing over the fleece. (graduated sizes to reduce bulk on finished wallet)



15. On right side of case fabric, mark center on both 5 ½" sides close to the edge. (2 ¾" is center)

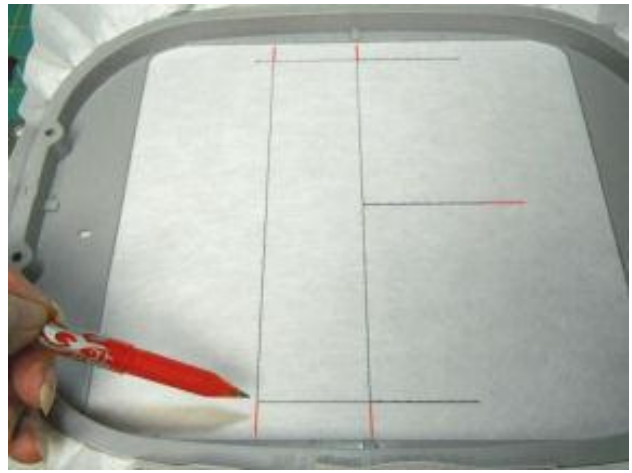

16. Stitch placement lines on stabilizer. Extend all vertical lines ~3/4" longer at top & bottom and make center line on right side longer as well. Spray stabilizer with temporary adhesive spray.


NOTE: For 5x7 hoops, mark an extra horizontal line ¼" above the horizontal placement line at the top. This was the only way I could get the design fit 5x7 hoops!



17. Place case fabric in hoop even with top placement line and center marks even. Tape corners, put hoop on machine. Finish stitching design on front using instructions in text file.



19. Center SLEEVE ensemble wrong side up in hoop keeping bound edge even with placement marks on left side and center mark on back of ensemble even with center line on stabilizer.

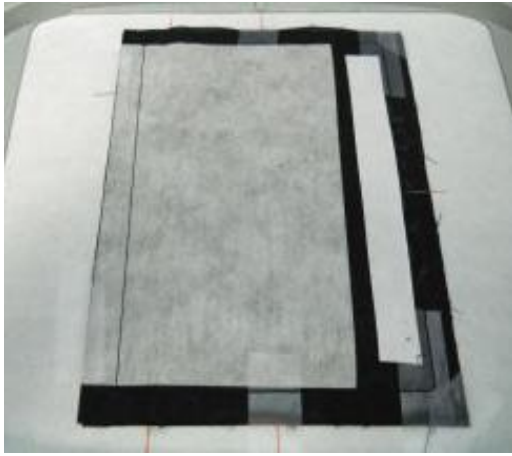

20. Center LINING wrong side up even with left side of fabric in hoop. Tape corners. Last step stitches wallet outline.



21. Remove ensemble from the hoop. Trim all of the sides to 1/4" seams to reduce bulk. Trim fabric at corners at an angle for turning.



Top stitch around edge of wallet with 1/4" seam

22. Remove paper backing from fusible tape on lining and turn wallet right side out through lining opening. Maneuver until all seams are even with edges & lining is flat. Iron to set edges & top stitch around edge of wallet with 1/4" seam. You're finished!



FRONT VIEW



INSIDE SHOWING VELCRO IS CENTERED!

Holds 4 debit/or credit cards or driver's license with pocket to store money, coupons or receipts.